

Hand pump SILVER HG1033



Pro-Tech
shop

Instructions for use
Translation of the original instructions

List of parts

PART	DESCRIPTION	THE MINORITY	PART	DESCRIPTION	THE MINORITY
1	Pump head	1	18	Valve base	1
2	Throat seal	1	19	Valve nut	1
3	Throat	1	20	Brass ring	2
4	Coupling nut	1	21	Barrel	1
5	Nut piston rod	1	22	Seal	2
6	Piston rod seal	1	23	Motherboard thread	1
7	Handle	1	24	Motherboard A	1
8	Vinyl handle	1	25	Motherboard B	1
9	Handle lever	1	26	Base	1
10	Thread lever	2	27	Telescopic tube	1
11	Thread lever	1	28	Tube seal	1
12	Rivet handles	1	29	Telescopic tube	1
13	Thread	1	30	Barrel seal	1
14	Piston rod	1	31	Washer (spring washer)	1
15	C ring	1	32	Piston ring	1
16	Valve spring	1	33	Rubber seal	1
17	Valve plate	1			

