Submersible pump for oil and diesel MINI 24V 60W



Instructions for use
Translation of the original instructions

Read this manual before using the device.



General product specifications

■ Fuel pump KD1171 - 24V

The pump is designed for pumping diesel and paraffin, excluding petrol. The pump head is made of iron and contains copper hoses.

NOTE	The equipment is not intended for pumping low flammable		
	fuels (e.g. petrol, LPG, alcohol, etc.).		

At a glance

- ✓ Lightweight construction
- ✓ Easy to install and use
- Ideal for pumping liquids from one container to another

A: Standard accessories



B: Warning:

- 1. Before connecting the pump, make sure that the voltage of the power supply corresponds to the voltage for which the pump is designed.
- 2. Voltage tolerance is +/- 5%.
- 3. The fuel flow follows the direction of the arrow on the pump.
- 4 Make sure the suction hose is properly sealed to ensure sufficient flow. A mains filter should be fitted to the end of the suction hose to protect the pump from dirt damage.
- 5. The duty cycle of the pump is 30 minutes under normal operating conditions. The pump is equipped with thermal protection which will shut down the unit if the maximum operating temperature is reached.

■ Product specifications

Product name	Fuel pump	Model	KD1171
Factor	Oil	Input/output connector	19 mm
Voltage	KD1171 - 24V	Power (w)	60
Flow rate	30 l/min	Maximum pressure	3bar
Lifting height	3m	Product weight	0,8 kg
Packaging	1 pcs in carton and 40 pcs in main carton	Dimensions	Diameter 53 mm
			Height 145 mm

■ Troubleshooting:

i i oubleshoothig.					
The problem	Cause	Solution			
No initial ail	1. inverted poles (+/-)	1. set the power supply poles +/- correctly			
No initial oil flow capacity	2. Leak in the suction hose	2 Make sure that the suction hose is correctly fixed and screwed and check for leaks.			
	3. the pump is not submerged	3. immerse the pump inlet into the liquid			
	1. too low voltage	1. Increase the voltage to a suitable level			
	2. too high adjusted head	2. Reduction in height			
Low oil flow	3. filter pollution	3. Remove dirt and clean the filter			
	4. worn blades or damaged gearbox	4. replace blades or gearbox			

NOTE: The pump duty cycle is 30 minutes. The mains filter should be cleaned regularly.



Waste from electrical appliances must not be disposed of with household waste. Electrical appliances should be taken to a recycling centre. Further information is available from your local authority.